 


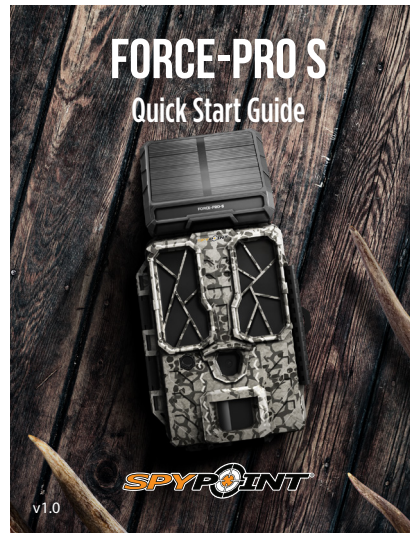

IN THE BOX

FORCE PRO S
INSTALLATION
STRAP

SD CARD
32GB






CHARGING CABLE

NOTE

The Force Pro S has an internal battery that can be charged using the supplied cable.
The use of additional AA batteries is optional.
User Manual, software updates & FAQs
available at: www.spypoint.com/support



COMPONENTS

- | | |
|-------------------------------|-------------------------------------|
| 1 No glow flash | 9 Screw-thread for standard 1/4"-20 |
| 2 Red LED indicator | 10 LCD screen |
| 3 Photo lens | 11 OK button |
| 4 Detection lens | 12 Switch ON/SETUP/OFF |
| 5 Cable lock hole | 13 Navigation buttons |
| 6 Slot for installation strap | 14 SD card slot |
| 7 Locking latch | 15 Battery compartment |
| 8 12 V jack | 16 Solar Panel |

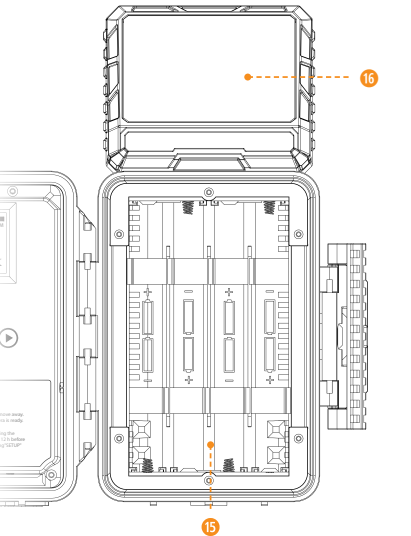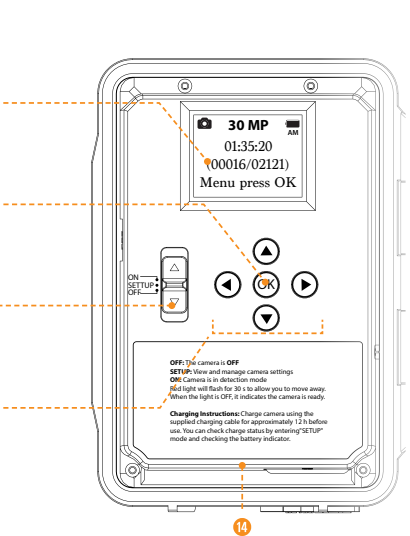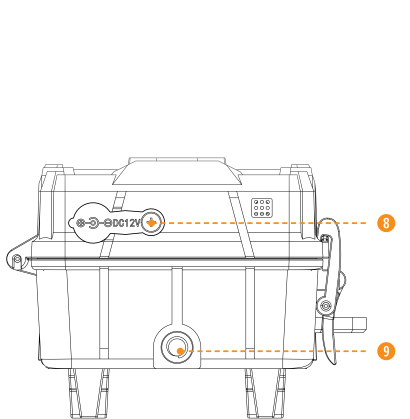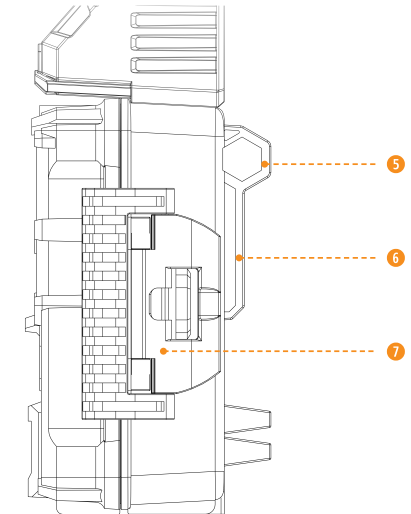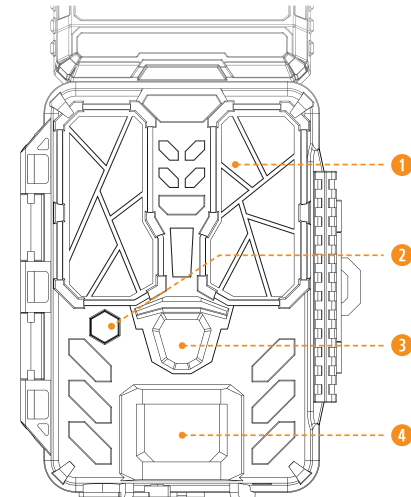     

PREPARATION

  Select a power source

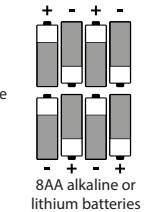

You can use any combination of the above power sources with your Force Pro S. If multiple power sources are connected, the camera will use them in the following order: Internal Battery, 12V, and then the AA.

The internal battery will need to be charged for first use. To charge the device, use the supplied cable and plug into the 12V port on the camera. It will take approximately 12 hours to fully charge the battery, you can check if the camera is fully charged by sliding the power switch to the "setup" position and look at the battery indicator on the screen. 4 Bars indicates it is fully charged.

FOR MAXIMUM PERFORMANCE AND WITHOUT LEAKING BATTERIES

- Use new batteries.
- Use ONLY alkaline or ONLY lithium batteries.
- Do not mix new and old batteries.
- Do not use rechargeable AA batteries, as their lower voltage may cause operating difficulties.

INSTALLING AN SD CARD

The camera was designed to operate with an SD card between 2 and 128 GB of memory.

 
INSERT AN SD CARD

- Make sure the camera is turned OFF.

- Locate the SD card slot. It is on the bottom right corner of the camera (see diagram).

- Insert an SD card (upto 128GB) in the slot and make sure to respect the direction indicated in the diagram.

- The card is inserted correctly when a click is heard.

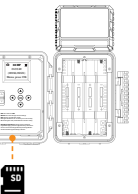

FORMAT YOUR SD CARD

Before inserting the SD card in your camera, it must be formatted to ensure proper operations. See section OTHER OPTIONS on page 8 for an explanation of the formatting process.

SETUP

Use the **▲▼◀▶** buttons to switch to the LCD display or to change options, and press OK to select. Several setup pages will be displayed.

GENERAL SETTINGS SETUP

1. To turn the camera ON/OFF, use the ON/SETUP/OFF switch.
2. The switch must be on SETUP to make your initial changes.
3. When the switch is on SETUP, press OK to open the MENU:

- Set the **language** (English, Français, Deutsch)
- Set the **date** (MM/DD/YY or DD/MM/YY)
- Set the **time** (12h or 24h)
- Set the **temperature** (°F/ °C)

ADJUST THE SETTINGS FOR THE 3 MODES OF OPERATION

PHOTO MODE

Delay: Allows you to select the time elapsed before the camera can detect again and take the next photo. If you want to capture multiple photos, use a shorter delay. Once you have selected the delay, press OK.

Quality: Allows you to select a resolution of 4 MP, 16 MP or 30 MP. Once you have made your selection, press OK.

Multi: Allows you to select the number of photos to be taken per shot (from 1 to 6 photos). Once you have made your selection, press OK.

Detect: Allows you to set motion-detector sensitivity (LOW, NORMAL, HIGH, AUTO). Once you have made your selection, press OK.

VIDEO MODE

Delay: Allows you to select the time elapsed before the camera can detect again and take the next video.

Quality: Allows you to choose between VGA, HD, FHD, QHD and 4K. Once you have made your selection, press OK.

Length*: Allows the user to choose the video length (10 to 60 s). Once you have made your selection, press OK.

Detect: Allows you to set motion-detector sensitivity (LOW, NORMAL, HIGH, AUTO). Once you have made your selection, press OK.

*When selecting a "Video Length" over 20 seconds, only daytime videos will be affected. Nighttime videos are limited to 20 seconds to preserve battery life.

TIME-LAPSE MODE

Allows you to take photos at regular predefined intervals without necessarily detecting a movement.

Night: Choose the BOOST option for maximum brightness at night, select OPTIMAL to reduce fuzziness at night, and MIN BLUR to minimize the blurriness of moving objects. Once you have made your selection, press OK. (Note: Regardless of the mode, the flash remains invisible.)

OTHER OPTIONS

Name: Allows to give a name to your camera.

About: Indicates the software version. Default: Resets all default settings.

Format: Allows the camera to format the SD card the next time it is used. (Reformatting the SD card will delete all photos and videos on the card. Only format the card if you are sure you want to delete everything on it. Transfer all data to your computer beforehand).

OPERATION

Once the setup is complete, turn the button from SETUP to ON. You may also switch from SETUP to OFF and turn the device ON later.

RED LIGHT ON THE FRONT OF THE CAMERA

When the switch is in the SETUP position, the red light will flash to confirm a motion detection once you have adjusted your settings.

When you move the switch to the ON position, the red light at the front of the camera will flash for 30 seconds to allow you to move out of the camera's field of view.

When the light turns off, the camera is ready for use.

INSTALLATION

Recommended height of installation: The camera must be installed at the height of the centre line of the animal's body.

Ideal setup for high-quality images and videos: The target animal should be 7.5 m from the camera to get a better line of sight.

To produce brighter photos at night, there could be items reflecting the camera's flash in the background.

Please note that the camera should never be directly pointed at the sun to avoid back lighting and faulty detections.



Scan for detailed instructions, LED light pattern descriptions, complete user manual & other helpful information :

spypoint.com/FORCEPROS-guide

Need assistance?
Just contact us!

spypoint.info/en/support-2/
+49 (0) 36331-403333

More information available in the certification guide.

2-year limited warranty, visit spypoint.com/garantie for complete details.

Made in china

